


2010 Series

LCN_®

Installation Instructions

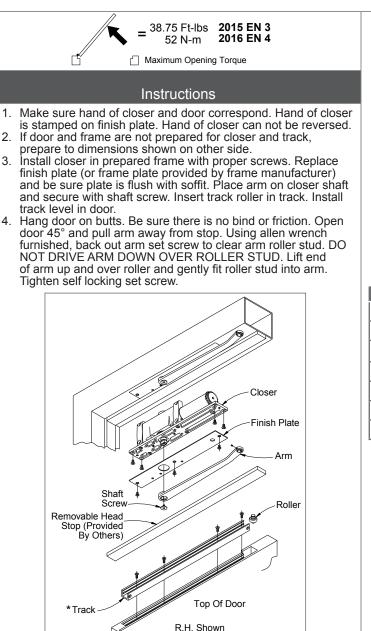


L.H. Opposite

Improper installation or regulation may result in personal injury or property damage. Follow all instructions carefully. For questions, call LCN at 877-671-7011

- 5. IMPORTANT: Closer has been regulated prior to shipment. Adjust regulation only if necessary. Use a 3/32" hex wrench and to adjust speed (see illustration). To slow main speed of door, turn regulating screw nearest shaft clockwise. To slow latch speed of door, turn regulating screw nearest hinge clockwise. BACKCHECK To increase backcheck intensity, turn regulating screw nearest latch clockwise.
- ① Do not use abrupt backcheck- nor expect door closer to act as a door stop.




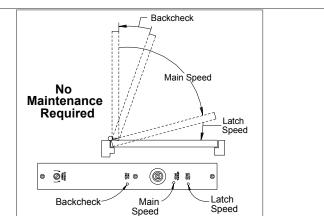

6. Adjust CLOSING POWER only if more power is needed. Closer is shipped with minimum closing power preset. To increase CLOSING POWER turn spring adjusting screw clockwise. Maximum adjustment is 18 turns.

	Table of Sizes	
Maximum Door Width		
Exterior Doors	Interior Doors	Catalog No. of Closers
	Ŀ.	2011
30 (765 mm)	38 (965 mm)	2013
36 (915 mm)	48 (1220 mm)	2014
42 (1065 mm)	54 (1370 mm)	2015
48 (1220 mm)	60 (1525 mm)	2016

7. HOLD OPEN ADJUSTMENT: Change the hold open position by removing screws (1) and then (3). Locate to required position as shown. (See illustration for hold-open spring clip position.) Install screw (3) securely. Tip cam (2) into track and locate as shown. Install long green screw (1) securely. Push door into hold open position. For INCREASED HOLDING POWER, loosen long green screw (1), slide cam (2) TOWARD LATCH, retighten long green screw (1) securely. For DECREASED HOLDING POWER, loosen long green screw (1), slide cam (2) TOWARD HINGE edge of door, retighten long green screw (1) securely.

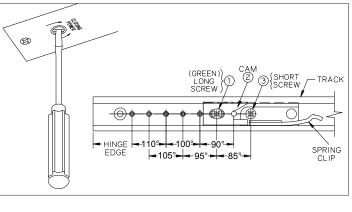



© Allegion 2014 Printed in U.S.A. 18755 Rev. 01/14-j

