V1088 FLOOR MOUNTED DOOR STOP

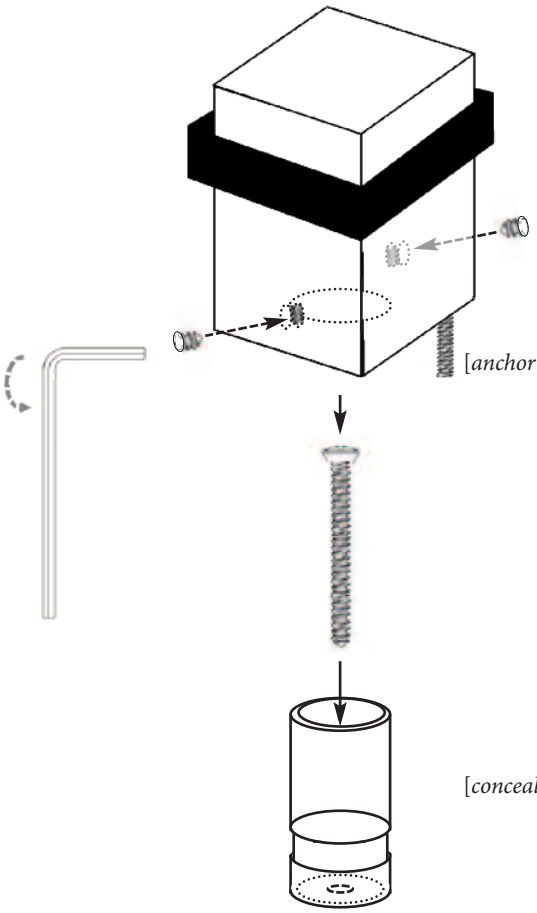

1

FLOOR MOUNTING TEMPLATE

MUST be printed off at full scale when using this template

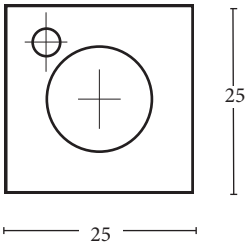

2

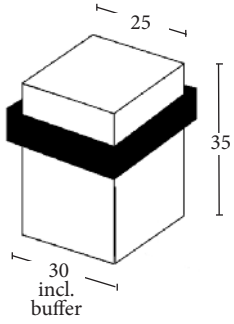

3

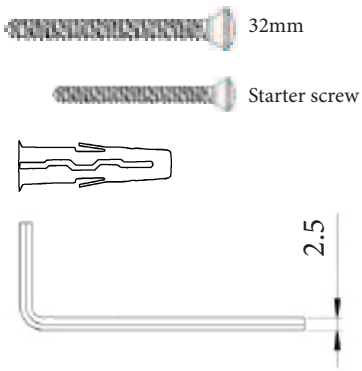

FITTING

1. Position base part behind door at a point more than half way along from the hinged edge and determine where to drill fixing holes as desired, there drill a 4mm hole for the affixed [anchor] and a central 4mm drilled hole (or larger to allow for rawlplug if you have concrete floors) utlising the template as given above.
2. To assemble: affix the concealed fixing mount through the centre hole using the 32mm screw provided, and onto which insert the door stop.
3. Next locate the anchor point and insert.
4. Then taking the Allen bolt, on two sides (as indicated above) grip the door stop to the concealed fixing mount using the grub screws provided.
5. Tighten and test

Overview	① Door Stop illustrated with floor template	② General dimensions of assembly	③ Supplied with: 1x Allen key 2x threaded grub bolt	1x 30mm screw 1x starter screw 1x plastic rawlplug

M Marcus Ltd., Dudley

Product Code	Material	Available in all Heritage Brass finishes.	Sizes shown are in mm and approximate. We reserve the right to amend where necessary and without any prior notice.
V1089	Solid Brass		

Property of M Marcus Ltd. ©